

T5-RW-USB-D1

125K T55x7 RFID reader/writer with USB interface

USB driver installation

Remarks :

Don't connect the USB reader with the PC when running below auto USB driver setup

[1] insert the USB driver disk to CD-ROM :

run the auto setup program from the following path :

cd-rom drive : \USB To Virtual Com driver\CP210x_VCP_Win2K_XP_S2K3.exe

windows OS support : 2000 , XP , Vista & 2003 server




[2] After driver installation → connect the USB reader to the PC's USB port with a USB cable .

Then the PC will find the reader and install the "USB to UART Bridge" driver automatically.

[3] After installation successfully , you will find "CP210xUSB to UART Bridge Controller (Com3)" as follow message from the control panel/system/hardware/device manager/port(COM & LPT) .

(may be see other COM port #, not the COM3 which is depend on your PC's hardware config.)

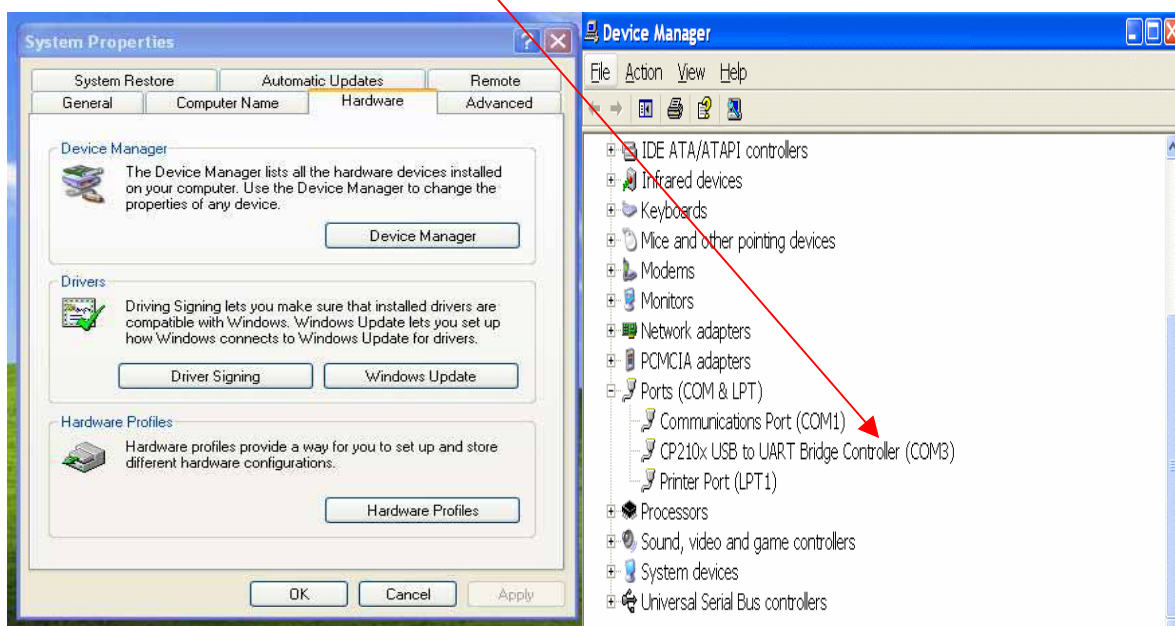


Demo program user guide

[1] copy full directory from the CD path : \demo program to your local PC

remake : The demo program can not be run from CD directly

[2] run the program from the path : \demo program\rfid.exe

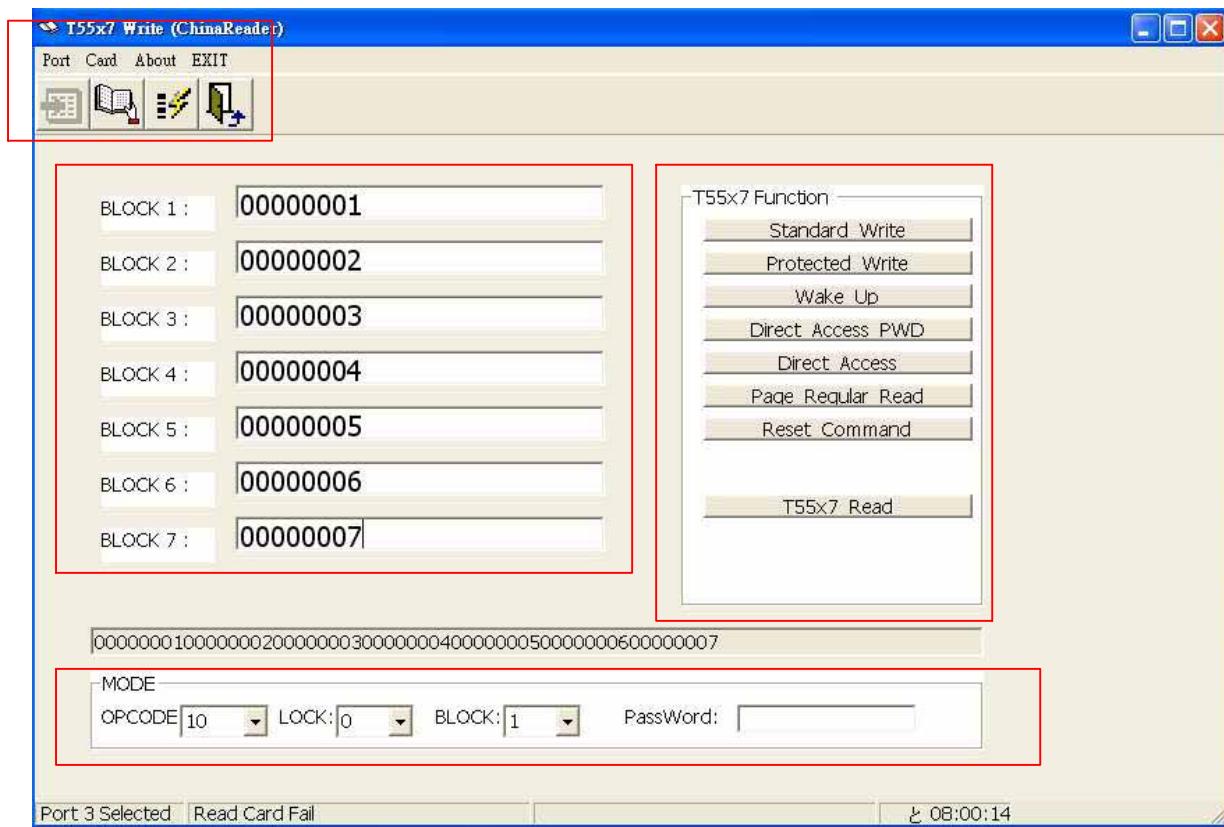

Port : select correct virtual com port No.

Card : No Function for this model



: this icon No Function

BLOCK : Block 1 TO Block 7 (7 x 32 bit data memory) – Refer to T55x7 datasheet in detail

T55x7 Function : Pls refer to T55x7 datasheet for the application in detail

MODE :

OPCODE : 4 mode selection – 00, 10, 01 & 11

LOCK : 0 – unlock / 1 - lock

Block : select Block 1 to 7

Password : entry password

Pls refer to T55x7 datasheet for the application in detail