

125K-R-LR-W26

125K Long Range (90-100)cm RFID Reader with Wiegand 26 bit interface

1. Introduction

This is a low cost and high performance proximity reader for reading ID code from EM4100 or compatible read-only tags. It features an extended reading range up to 90-100 cm. It is ideally suited to be applied in automatic parking system, personal identification, access control and production control systems etc.

2. Features

- High sensitivity and reliable performance;
- Built-in transceiver antenna for max. performance ;
- Maximum effective distance up to 90-100cm
- Less than 100ms decoding time;
- Low power dissipation with single power supply;
- Built-in buzzer and external LED indicator ;



3. Specification

Power Requirements	Linear regulated 12VDC at 300mA typical, 500mA max.
Interface	Wiegand 26 bit
Max. Read Range	90-100cm (with special 125Khz long range card) - 125K-T2-LR (86x54x1.8)mm
Frequency	125Khz typical / EM4100 or compatible
RFID card requirement	High Q 125K long range Read only card
Sound Indication	Buzzer
Operating Temp.	0°C -70°C
Dimension	24 X 24 X4 (cm)

4. Interface Description

Color	Reader wires Description
Red	+12VDC To power supply
Black	Power (-ve) To power supply
Green	Data 0 (wiegand 26 bit)
White	Data 1 (wiegand 26 bit)
Brown	Hold

5. Protocol - Wiegand 26bit

Wiegand26 format

P0	12 bits	12 bits	P1
----	---------	---------	----

P0 - even parity for first 12 bits, P1 - odd parity for second 12 bits

6. Trouble shooting

When powered up , the reader takes a self-test to ensure the best reading performance with the buzzer beeping continually. When the self-test ends, the buzzer will give out a long beep and enter the normal working mode.

If the buzzer continue beeping without stop for a long time, Pls turn off the power and check out the environment and power supply to ensure locating the reader in a good working condition.

In case of problems the following procedure should be followed:

Failure to finish self-test with the buzzer beeping continually or with a short reading distance.


1. check the power input connections making sure that they are not reversed
2. check the power supply complying with the specifications
3. change another brand power supply
4. if the supply has a current limit, set this to > 500 mA
5. make sure to install the reader in a environment without large area conductors nearby or mounting on a conductive surface. In self-test state, do not apply any tags in the reader functional area;
6. change to another location or angle to improve the reading range performance

Power supply requirement :

Linear regulated type external DC power supply
Voltage Output : + 12V DC +/- 5% at 2A typical

Connection Diagram with access controller by Wiegand 26 bit interface

125K-R-LR-W26 Reader	Access controller (AC-301)
Data 0 (Green)	Data 0 (Green) Wiegand 26bit
Data 1 (White)	Data 1 (yellow) Wiegand 26bit
Power +12V (Red)	Power +12V (Red)
Ground (Black)	Ground (Black)

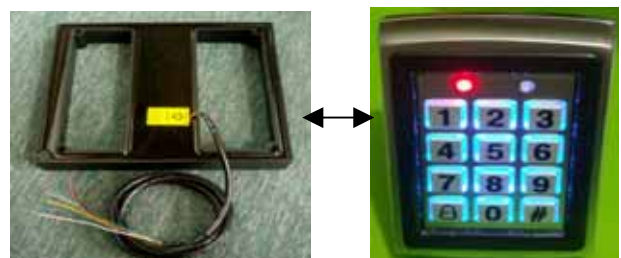

Refer to AC-301 user manual in detail before installation